

2016.0 RANGE ROVER (LG), 501-16

WIPERS AND WASHERS

WINDSHIELD WASHER PUMP

[G1521850]

REMOVAL AND INSTALLATION

REMOVAL

WARNING:

Be prepared to collect escaping fluid.

NOTE:

Removal steps in this procedure may contain installation details.

1. Remove the battery ground cable.
Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).


2.

WARNING:

Make sure to support the vehicle with axle stands.

Raise and support the vehicle.

3. Refer to: [Windshield Washer Reservoir](#) (501-16 Wipers and Washers, Removal and Installation).

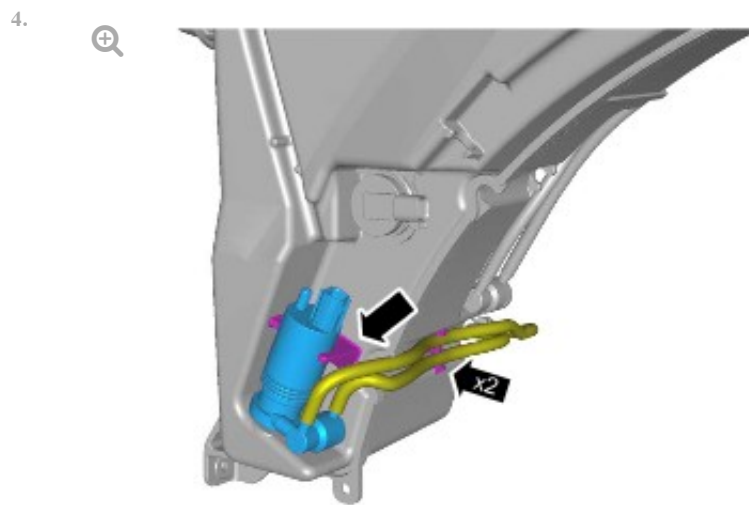

E145824

INSTALLATION

1. **CAUTION:**

The seals are to be reused unless damaged.

To install reverse the removal procedure.