

PUBLISHED: 27-JUN-2017
2015.0 RANGE ROVER (LG), 303-14

ELECTRONIC ENGINE CONTROLS - TDV8 4.4L DIESEL

CHARGE AIR PRESSURE SENSOR (G2164972)

REMOVAL AND INSTALLATION

18.31.01	SENSOR - CHARGE AIR PRESSURE - RENEW	4400 CC, TDV8	2	USED WITHINS	
----------	--	------------------	---	-----------------	--

REMOVAL



NOTE:


- This procedure contains some variation in the illustrations depending on the vehicle specification, but the essential information is always correct.
- This procedure contains illustrations showing certain components removed to provide extra clarity.

1.

Remove the left air filter assembly.


Refer to: Left Air Cleaner (303-12, Removal and Installation).

2.

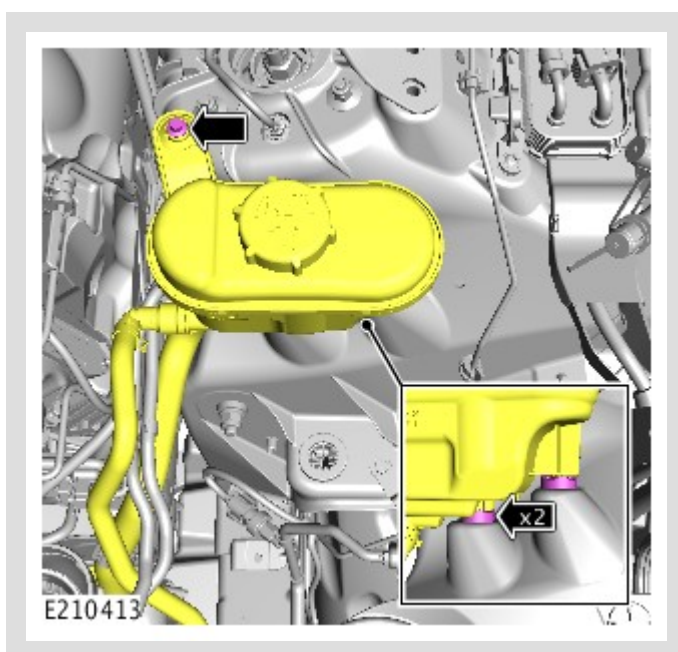


Position the dynamic response fluid reservoir away from the engine.

3.

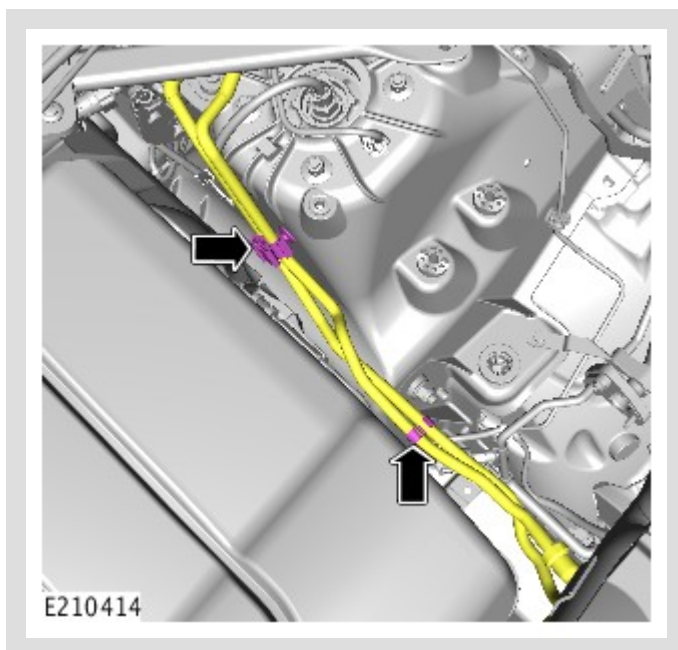


Release the 2 clips and position the 2 coolant hoses away from the engine.

4.

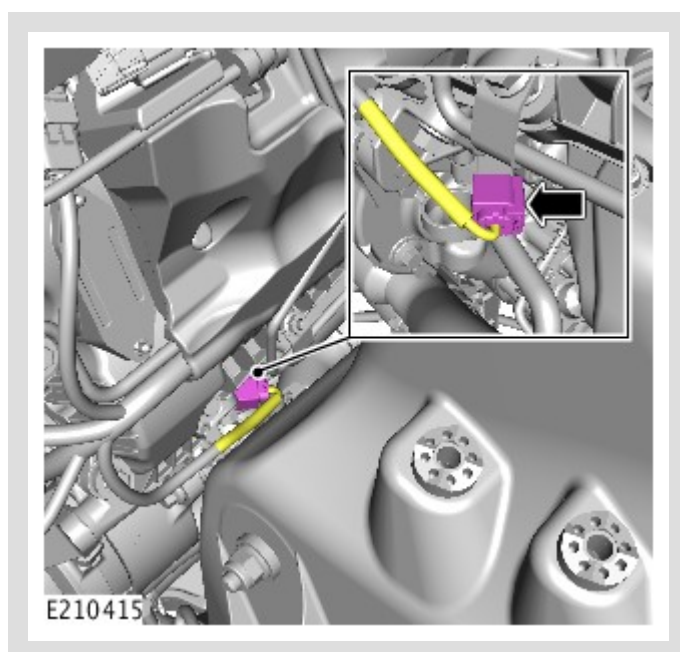


Disconnect the electrical connector.

5.

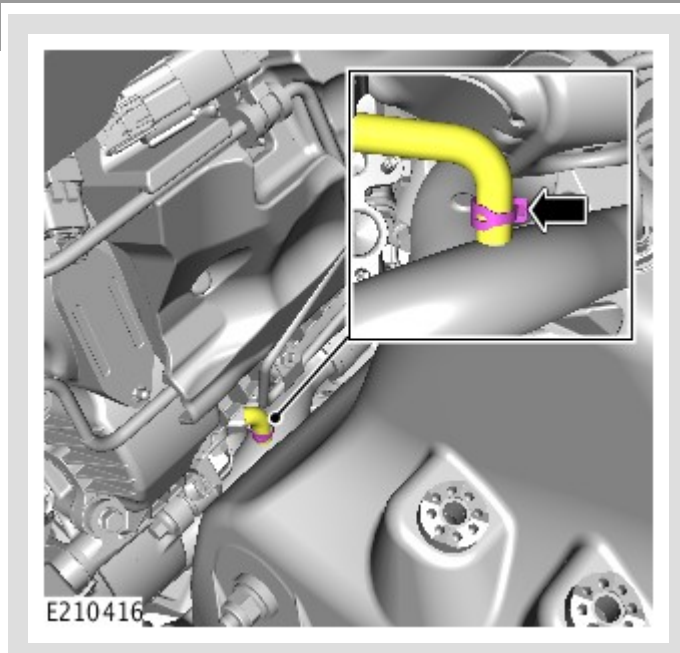


Disconnect the charge air pressure sensor hose from the turbocharger outlet pipe.

6.

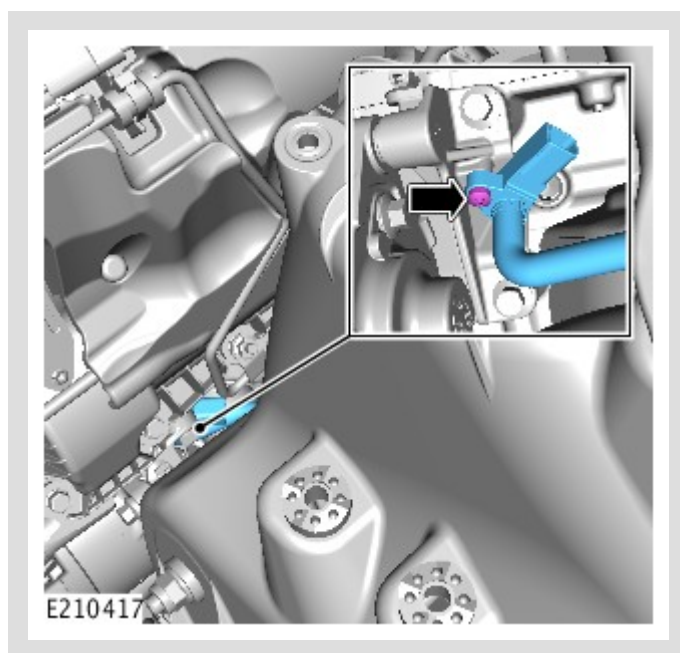

Remove the charge air pressure sensor.

7.

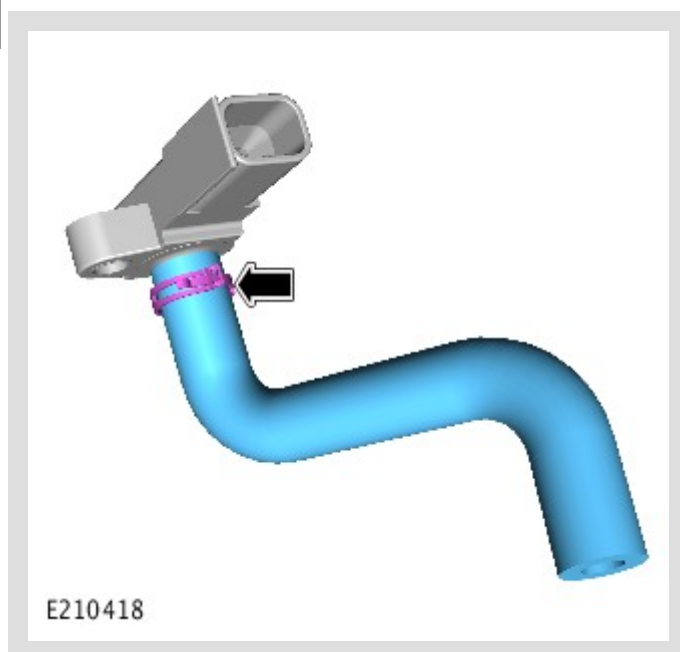

Remove the charge air pressure sensor hose.

INSTALLATION

1. Install the charge air pressure sensor hose.
2. Install the charge air pressure sensor.
3. Connect the charge air pressure sensor hose to the turbocharger outlet pipe.
4. Connect the electrical connector.
5. Secure the 2 coolant hoses.
6. Secure the dynamic response fluid reservoir.
Torque:
Bolt **5 Nm**
7. Install the left air filter assembly.
Refer to: Left Air Cleaner (303-12, Removal and Installation).